



ABOVE Ground Plumbing Connection

BELOW Ground Plumbing Connection

All dimensions are in mm

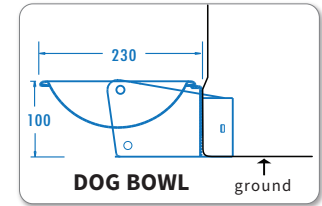

Internal Base Mounting Plate

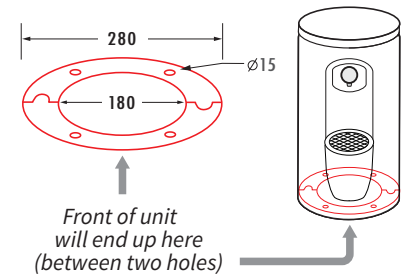


- Place Base Mounting Plate (BMP) halves in position on the installation surface. Position the BMP so that the Front of the unit will be in the middle of 2 holes.
- Mark anchor points on the surface through BMP holes and drill out.
- Fit off either 12 mm threaded rods or 16mm dynabolts*
- Remove PVC S-Trap inside to gain access to the base of the unit.
- Place unit over anchors, then place BMP halves back inside unit over anchors and secure in place.

* Indicates correct gauges for anchor system types listed; choice of anchor system is at installer's discretion

Location of Water Inlet & Waste Water Outlet

Locate Water Inlet & Waste Water Outlet at back of unit (out of view), or at either side if necessary.

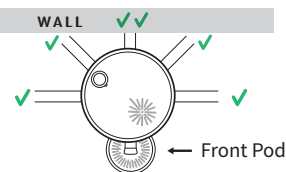

External Isolation Valve
(Recommended - not supplied)
Connect **before** installation

External Isolation Valve
(Recommended - not supplied)
Connect **before** installation



Code: AB126D

1300 213 774
www.aquabubbler.com.au

0800 213 774
www.aquabubbler.co.nz

