# **Pre-installation/Installation**

## Wall Refill aquaBUBBLER

Product Codes: ABWR21-P (for p-trap) and ABWR21-T (for tank)




★ IMPORTANT >>>

Unit must be installed by a Certified Plumber



- failure to do so will void all warranties.

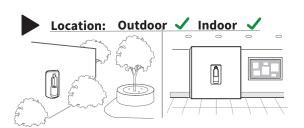

#### **Identify Water & Drainage Points**





Install onto:








#### **Connections via Wall / Connections Externally**

ABWR21-P Back Bracket Water Supply — **Drainage Location** 

 Options



**Put up Hanging Screw** 

Mark Hanging Screw Point of unit on wall

Put a Hanging Screw (supplied) in Leave head off wall surface ≥ 5mm

**Set up Connections** 

Consult SCHEMATIC, mark other connection points referencing the Hanging Screw



Hang up Unit

Hang unit on wall over the Hanging Screw

The Water Supply and Drainage pipes should be able to come through the Back Bracket

Open unit by unscrewing Locking Screw in the top back centre of the outer shell using T30 Post Torx Security Screwdriver (supplied)

Gently swing the unit body open by lifting it off the top of the bracket and then fold out forwards


Put Screws through Back Bracket to anchor unit to wall

- Solid wall screws + green plugs (supplied) along sides
- Stud wall Tek screws (supplied) along centre into timber stud

### **Connect Drain Outlet**

If drainage is chosen straight below Hanging Screw (option 2 in schematic), fit P-Trap directly to PVC pipe.

If it is offset at Left or Right (option 1 & 3 in schematic), fit 45°elbow (supplied) between P-Trap and PVC pipe with Sealant

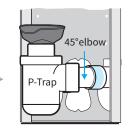


65°C

**Connect Water Supply** 

Connect mains water in to 1/2"BSP connection.

Water pressure can be adjusted by the Regulator

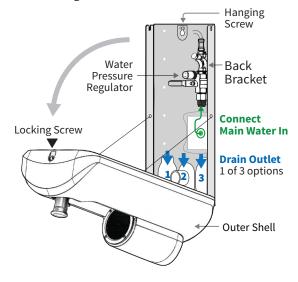



Close unit and secure Locking Screw.

Run tap and check for leaks



Leave T30 Post Torx Security Screwdriver with client





Maximum Water Pressure: 1600 kPa **Maximum Temperature:** 

AU: 1300 213 774 NZ: 0800 213 774 www.aguabubbler.com







