
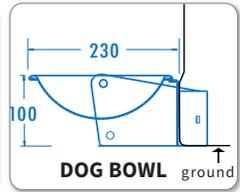
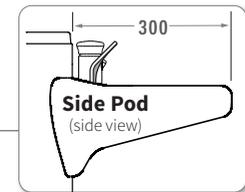
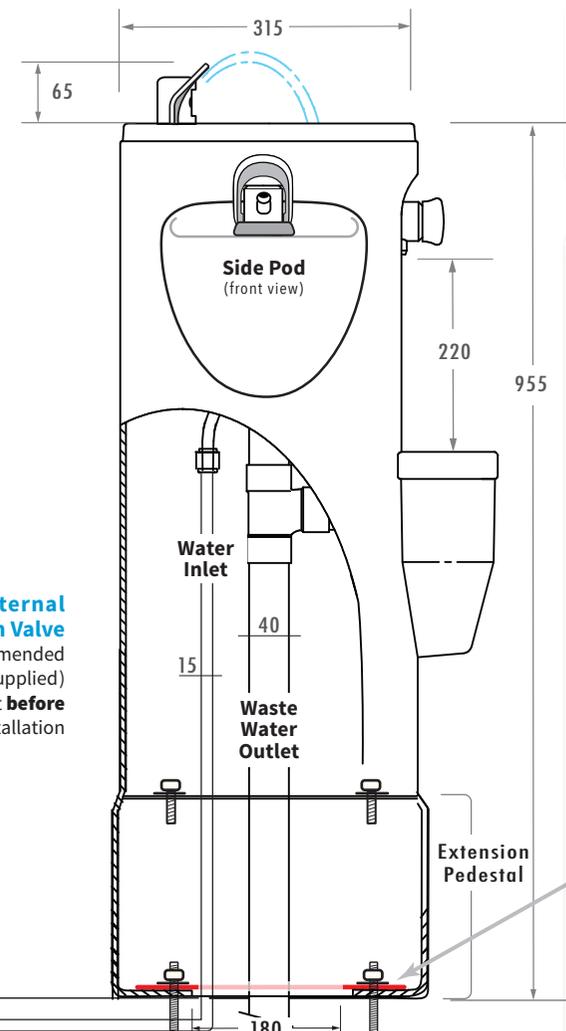



### ABOVE Ground Plumbing Connection

### BELOW Ground Plumbing Connection

All dimensions are in mm

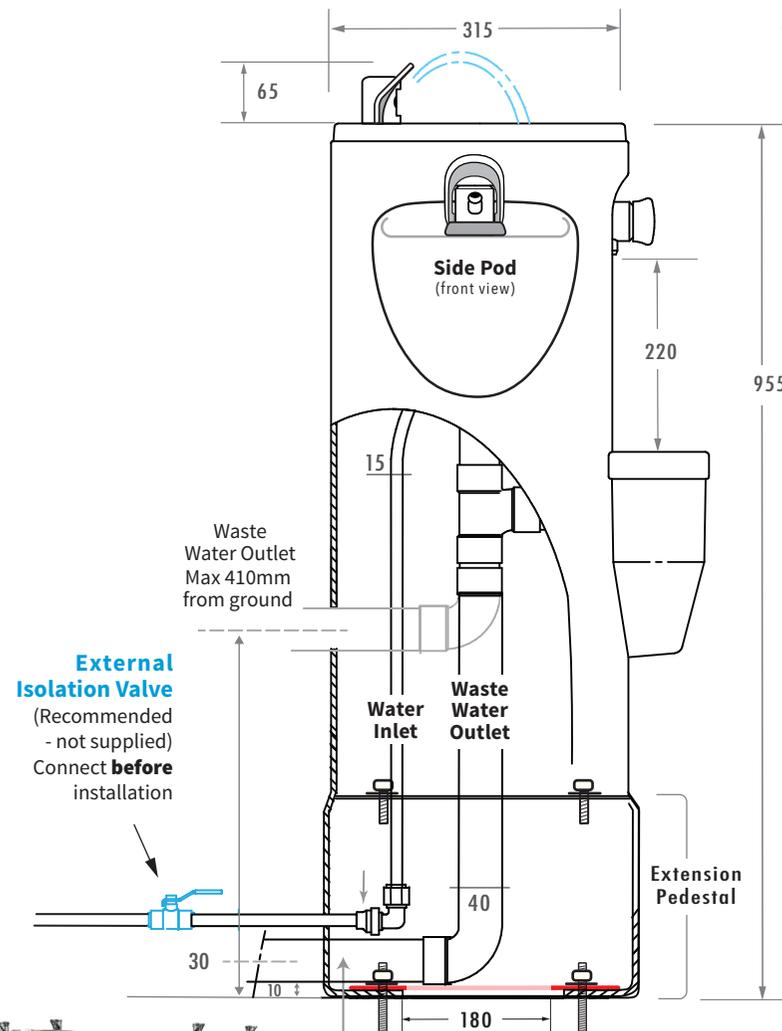

### Internal Base Mounting Plate

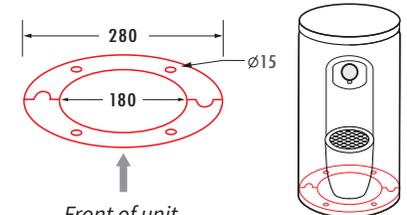


Front of unit will end up here (between two holes)

- Place Base Mounting Plate (BMP) halves in position on the installation surface. Position the BMP so that the Front of the unit will be in the middle of 2 holes.
- Mark anchor points on the surface through BMP holes and drill out.
- Fit off either 12mm threaded rods or 16mm dynabolts\*
- Remove PVC S-Trap inside to gain access to the base of the unit.
- Place unit over anchors, then place BMP halves back inside unit over anchors and secure in place.

\* Indicates correct gauges for anchor system types listed; choice of anchor system is at installer's discretion

### Location of Water Inlet & Waste Water Outlet

Locate Water Inlet & Waste Water Outlet at back of unit (out of view), or at either side if necessary.

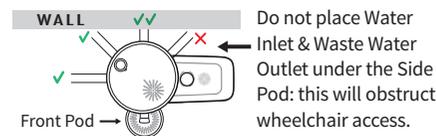

Code: ABUA1310D & AB2UA1410D

**1300 213 774**  
www.aquabubbler.com.au

**0800 213 774**  
www.aquabubbler.co.nz

