


★ IMPORTANT >>>

Unit must be installed by a Certified Plumber




- failure to do so will void all warranties.

① Location: Outdoor ✓ Indoor ✓

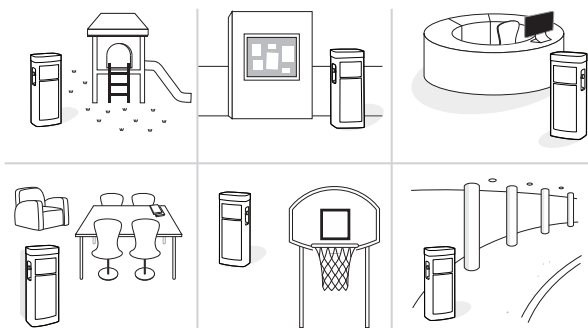


Install onto :

② Ground Work ✓ Concrete Pad ✓ Timber Floor ✓

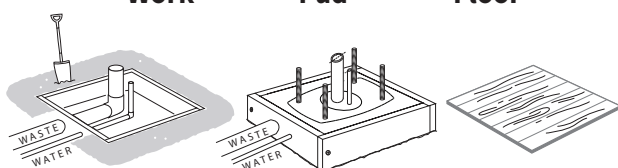


③ Determine Plumbing Connection

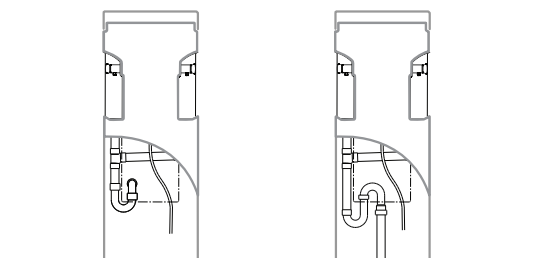

Above Ground


Below Ground

④ Identify Water & Drainage points

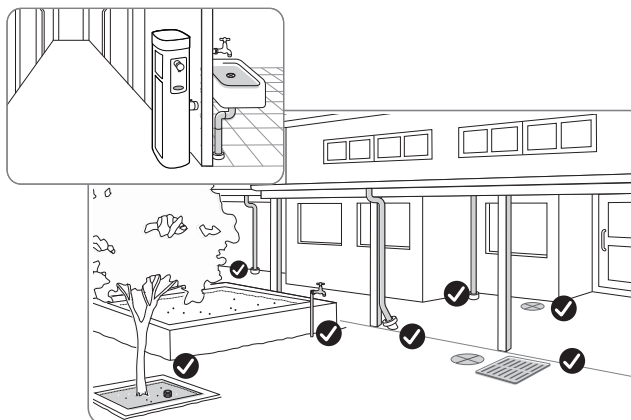


⑤ Is an Anti-Freeze Valve Required?

Where installed in frost-prone areas, unit must be fitted with an Anti-Freeze Valve. Warranty will otherwise be void

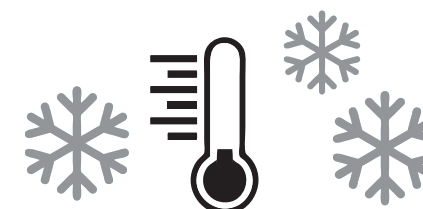

⑥ Plumbing Tools Required

- ① Timber boxing foundation
- ② Screws and washers
- ③ Bag of cement
- ④ Socket Extension Bar
- ⑤ 10 mm threaded rod and nuts
- ⑥ Flexible head ratchet wrench
- ⑦ 43 mm hole saw
- ⑧ 15 mm hole saw
- ⑨ 10 mm socket

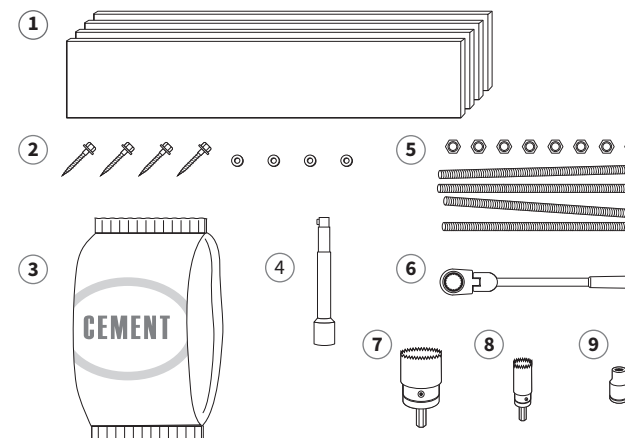

ATTENTION PLUMBER: See next page for INSTALLATION GUIDE



★ IMPORTANT >>>

Unit must be installed by a Certified Plumber



- failure to do so will void all warranties.


1 Consult Schematic

Mark measurements and dimensions as indicated by Schematic:

Twin Refill ABS14 ▶

Schematic is also available for download from our website

2 Expose Access Panel

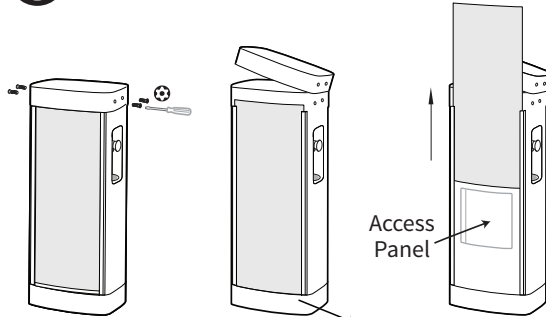


Remove lid with T30 Post Torx Security Screwdriver (supplied)

Remove aluminium strip at base to ease movement

Slide poster up to expose Access Panel


3 Locate Internal Base Mounting Plate

- Place Base Mounting Plate in position on the installation surface.
- Mark anchor points on the surface through BMP holes & drill out.
- Fit off either 12 mm threaded rods or 16mm dynabolts*
- Gain access to the base of the unit via Access Panel.
- Place unit over anchors, then place the Plate back inside unit over anchors and secure in place.

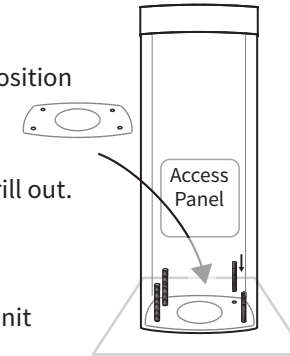


* Indicates correct gauges for anchor system types listed; choice of anchor system is at installer's discretion

4 Flush out the lines

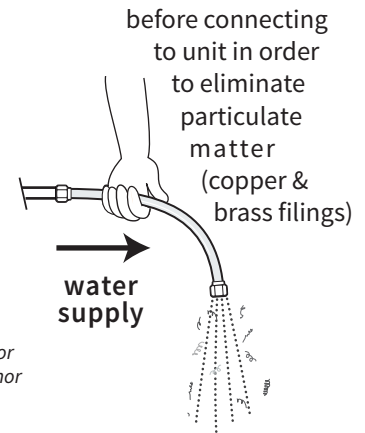


5 Install Isolation Valve

(not supplied)
on mains line,
external to unit
(recommended)

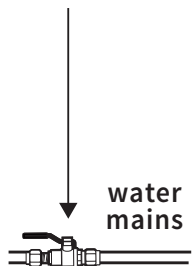

6 Attach DB

Units with Dog Bowl (DB) only

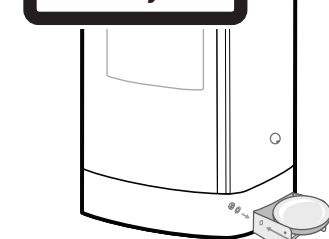


Insert coach bolts through square holes (either side of DB)

Secure bolts from inside of unit with washer and lock nut

7 DON'T FORGET:

Check for leaks

Run taps and adjust any insecure connections.

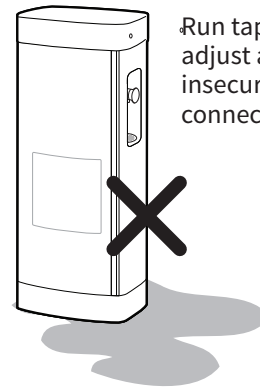

8 SET UP FOR USE:

Adjust water pressure

Rotate keyhole with a 5mm screwdriver to adjust water pressure.

Advise client to check water pressure 48 hours after installation, as it may require re-adjustment.

Leave T30 Post Torx Security Screwdriver with client



ATTENTION PLUMBER: See previous page for PRE-INSTALLATION GUIDE