


Unit must be installed by a  
**CERTIFIED PLUMBER.**  
Failure to do so will void all warranties.

Installation must be in accordance with  
AS/NZS 3500.1 & AS/NZS 3500.2

Maximum Water Pressure: 1600 kPa  
Maximum Temperature: 65°C



- **Locations**  **Outdoor** ✓  **Indoor** ✓
- **Identify Water Inlet & Waste Water Outlet Points**

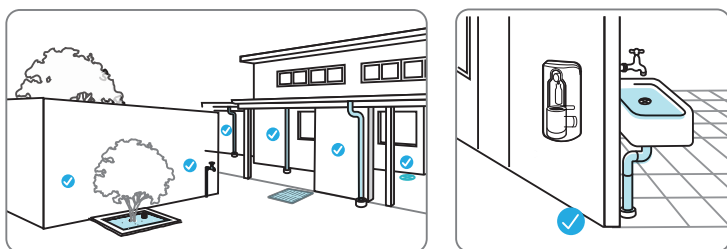

### ► Determine Installation Surface

**Solid Wall / Brick Wall** ✓



**Stud Plaster Wall** ✓

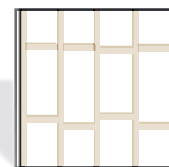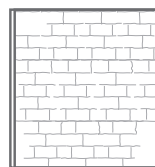

### ► Connections via Wall / Connections Externally

ABWR21-P

ABWR21-T

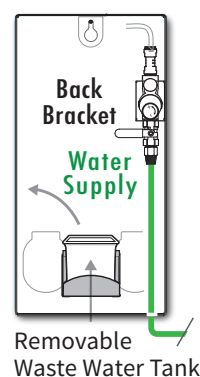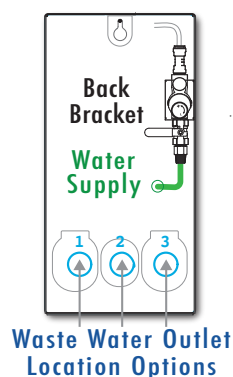


## INSTALLATION

### 1 Put up Hanging Screw

Mark **Hanging Screw Point** of unit on wall

Put a Hanging Screw (supplied) in  
Leave head off wall surface  $\geq 5\text{mm}$



### 2 Set up Connections

Consult SCHEMATIC on <https://aquabubbler.com>  
Mark other connection points referencing the  
Hanging Screw



### 3 Hang up Unit

Hang unit on wall over the Hanging Screw

The **Water Inlet** and **Waste Water Outlet** should be able to  
come through the Back Bracket

Open unit by unscrewing Locking Screw in the top back  
centre of the outer shell using T30 Post Torx Security  
Screwdriver (supplied)

Gently swing the unit body open by lifting it off the top of  
the bracket and then fold out forwards


Put Screws through Back Bracket to anchor unit to wall

- Solid wall - screws + green plugs (supplied) along sides
- Stud wall - Tek screws (supplied) along centre into timber stud

### 4 Connect Waste Water Outlet

If drainage is chosen straight below  
Hanging Screw (option 2 in  
schematic), fit **P-Trap** directly to  
PVC pipe.


If it is offset at Left or Right  
(option 1 & 3 in schematic),  
fit **45°elbow** (supplied) between  
P-Trap and PVC pipe with **Sealant**

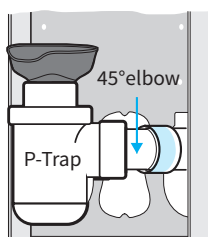

### 5 Connect Water Inlet & Waste Water Outlet

Connect water inlet to 1/2" BSP connection.

Water pressure can be adjusted by the Regulator

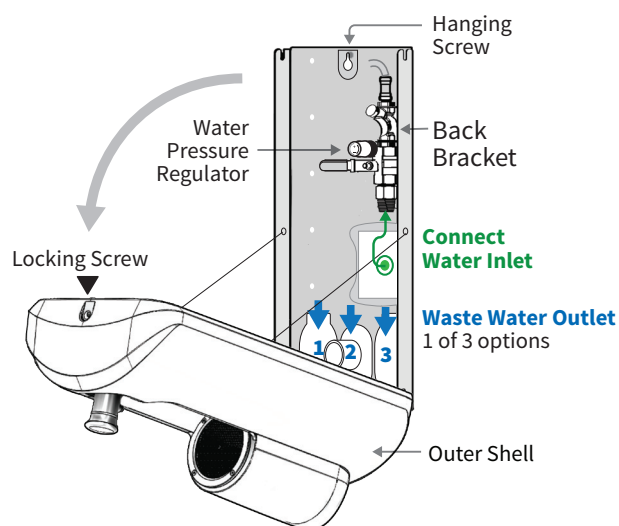

### 6 Finishing

Close unit and secure  
Locking Screw.  
Run tap and check for leaks

### 7 Before You Go

Leave T30 Post Torx Security  
Screwdriver with client

